

NETGEAR

INSTALLATION GUIDE TA612V VOICE ADAPTER

MINIMUM SYSTEM REQUIREMENTS

Before installing the NETGEAR TA612V Broadband Voice Adapter, please make sure that your computer system has the following:

- Broadband Internet connection via cable or DSL modem.
- Home analogue telephone with a single line.

SINGLE USER INSTALLATION


This guide shows you how to set up your Broadband Voice Adapter as a Router when connecting it to a switch or single PC.


1. SET UP THE NETWORK CONNECTIONS

- Unplug the power cable for your modem. Make sure that you have turned your computer off and that you DO NOT plug in the TA612V voice adapter until instructed to do so.
- Disconnect the Ethernet cable from the back of your PC and then plug it into the Internet Port on the TA612V.
- Connect one end of the Ethernet cable we provide into the PC port on the TA612V. Connect the other end of this Ethernet cable into the Ethernet port on the computer.
- Connect a telephone to the TA612V Phone 1 port.
- Power on the modem. **Wait about two minutes for it to start up.**

WARNING: Do NOT connect your telephone cable from the telephone ports of your Netgear Voice Adaptor straight into the telephone PSTN wall socket; This will cause your Netgear Voice Adaptor to Malfunction.

2. THEN, INSTALL THE TA612V VOICE ADAPTER


- Plug the power cable into the TA612V Power port, and plug the other end into an electrical outlet. This turns on your TA612V Broadband Voice Adapter. You do not need to unplug it when not in use.
- Check that the Power light  on the Voice Adapter is illuminated. **Wait at least five minutes for the phone adapter to start up.**

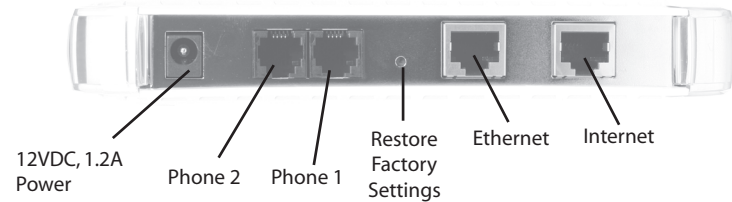

There may be updates that need to be downloaded such as new firmware or changes to your features. **Do not interrupt the registration process by unplugging the power or lifting the receiver on your phone during the start-up process. Interruption of the startup may result in interruption of service.**

- The status light on the front of the TA612V will flash. **Wait five minutes before continuing.**

Blink=Activity Ethernet: Green=100Mbps/Amber=10Mbps

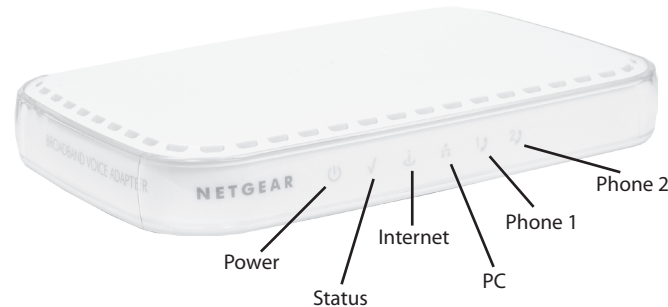

- If you have a broadband connection that requires PPPoE you need to set up your PPPoE username and password in the TA612V. Point your browser to: **<http://192.168.61.1/>** Log in using the username and password printed on the back of the TA612V. After setup reboot your TA612V.

3. SET UP AN ACCOUNT AT ENGIN

- Power up the computer.
- Use a Web browser to go to the engin Website, www.engin.com.au/public/signup.htm Follow the instructions to register your account. Once you have registered your Netgear Voice Adaptor you be sent an activation email when your details have been processed.

HELPFUL HINTS

- The LEDs for the Phone 1 and Phone 2 ports work as shown below:

Amber On:	The phone is off the hook
Amber Fast Blink:	Not ready, registering to server.
Green On:	Ready to use.
Green Blink:	The phone is connected.
Off:	The port is disabled or the power is off.
- For further information on using the engin service please refer to the engin User Guide (Included).