

Netgear Telephone Adaptor Features User Guide

Turbo Dialling

When making a call, you can speed up the time taken to dial a phone number.


To activate Turbo Dialling



Block Caller ID

When making a call, your phone number is sent to the phone of the person you are dialling. You can control sending your phone number by blocking your number on a call-by-call basis.

To activate Block Caller ID

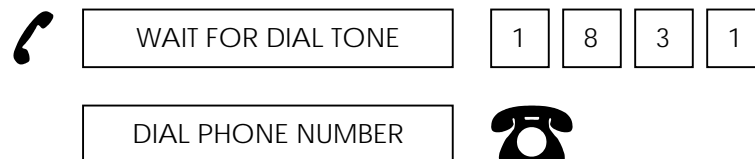

Call Waiting

While you are on a call, the call waiting tone (one beep every 10 seconds) will advise you of an incoming call waiting to be answered. The call waiting service is automatically enabled as the factory default setting.

To answer an incoming call, while already on a call



Press in quick sequences the phone feature for terminating a call, followed by the phone feature to answer the call (call end, followed by talk function)

To switch between calls



Press in quick sequences the phone feature for terminating a call, followed by the phone feature to answer the call (call end, followed by talk function)

To hang up on one call and return to the other

 


Follow the above procedure to switch between calls on Call Waiting.

Three-Way Calling

While engaging in an active call, you can originate a call to a third party and have a Three-Way, conference style, conversation.

To place activate call on hold and originate a new call



Press in quick sequences the phone feature for terminating a call, followed by the phone feature to answer the call (call end, followed by talk function) and dial the phone number for the third party.

To establish the Three-Way conversation



Press in quick sequences the phone feature for terminating a call, followed by the phone feature to answer the call (call end, followed by talk function)

To hang up on one call and return to the other



Follow the above procedure to switch between calls on Three-Way Calling.



Call Forward Unconditional

This service is used to forward all incoming calls to a specific phone number. All incoming calls will be forwarded to your specified number regardless of the status of your phone (i.e. active, engaged, no answer, not in use and powered down).

To activate Call Forward Unconditional please contact Engin customer service.

Call Forward No Answer

This service is used to forward your incoming calls to a specific phone number when your line has no answer.

To activate Call Forward No Answer please contact Engin customer service.

Call Forward Busy No Answer

This service is used to forward your incoming calls to a specific phone number when your line is busy and/or has no answer.

To activate Call Forward Busy No Answer please contact Engin customer service.

Voicemail

Never miss a call with Engin Voicemail. Engin Voicemail forwards any missed call to your voicemail box allowing the caller to leave a message for you. Retrieve your messages by phone or email. For full details please refer to the [Engin Voicemail User Guide](#).