

VoIP Internet Phone User Guide

This User Guide is intended for use of the DSE F 7051 VoIP Internet Phone. The F 7051 works in conjunction with the engin Eyebeam softphone. Please ensure that you download the F 7051 drivers found on the VoIP Internet Phone CDROM supplied.

Note: Information on using the engin Softphone can be found by referring to the engin [Softphone User Guide](#).

Tip: If you have already loaded drivers and are still having difficulties getting the keypad to work please shut down and restart the engin softphone. Following this please run the audio tuning wizard (by right clicking on softphone) and ensure that you select **USB Device** in all fields.

Making and Receiving Calls

The F 7051 has an invisible hook switch with proximity sensing so that the phone is automatically activated or deactivated when you pickup or hang up the handset.

To make a call:

Lift handset and dial phone number



To terminate a call:

Replace handset on base station

Tip: If you wish to make another call you can press the



button to end a

To receive a call:

Lift handset to answer call

Hookswitch Button

Whilst on a call use the **Hookswitch** button to place your current call on hold and activate a new line for another call. Hookswitch can then be used to switch between caller one and caller two.

Adjusting Volume on Handset

Volume can be adjusted on both the engin Eyebeam and on the F 7051 VoIP Internet Phone.

To adjust volume:

Lift handset and press + or -

Activating Mute Function

Lift handset and press **Mute**

Redial

Lift Receiver

